

## **AA & 3.7 VOLT BATTERY WARNINGS:**

1. READ & ADHERE TO ALL INSTRUCTIONS AND WARNINGS BEFORE USING ANY ACTIONHEAT™ PRODUCTS.
2. USE CAREFULLY. PRODUCT GETS VERY HOT. DO NOT USE WHILE SLEEPING OR UNCONSCIOUS.
3. UNATTENDED USE OF ELECTRIC HEATED PRODUCTS ON ANIMALS, CHILDREN OR INCAPACITATED PERSONS MAY BE DANGEROUS.
4. DUE TO THE NATURE OF BATTERY HEATED PRODUCTS, THEY MAY CAUSE BURNS OR DISCOMFORT. CONSULT A PHYSICIAN PRIOR TO USE ON SENSITIVE SKIN OR IF YOU MAY HAVE A MEDICAL CONDITION AFFECTING CIRCULATION OR SKIN SENSITIVITY.
5. FREQUENTLY CHECK SKIN UNDER HEATED AREAS TO AVOID BURNING. UNDERSTAND YOUR INDIVIDUAL EARLY WARNING SIGNS OR SENSATIONS OF A BURN AND REMOVE THE HEATED GARMENT BEFORE ANY BURNS OCCUR. IN THE RARE EVENT OF EXPERIENCING ANY SENSATION OF OVERHEATING OR DISCOMFORT WHILE USING ANY ACTIONHEAT™ PRODUCT, IMMEDIATELY REMOVE THE GARMENT, UNPLUG ANY WIRES AND POWER PACKS.
6. DO NOT ATTEMPT TO DISASSEMBLE OR ALTER ANY PART OF THIS PRODUCT OR POWER PACK.
7. DO NOT STORE POWER PACK OR BATTERIES BELOW -4°F (-20°C) OR ABOVE 120°F (49°C).
8. DO NOT ALLOW BATTERIES OR POWER PACKS TO COME INTO CONTACT WITH WATER OR OTHER LIQUIDS. IF WATER OR OTHER LIQUIDS ENTER THE POWER PACK'S INTERIOR IMMEDIATELY UNPLUG THE POWER PACK FROM FROM POWER PACK. CONTINUED USE OF A POTENTIALLY DAMAGED PRODUCT MAY RESULT IN FIRE OR AN ELECTRICAL SHOCK.
9. DO NOT EXPOSE POWER PACKS, BATTERIES OR HEATED PRODUCTS TO DIRECT FLAME OR PLACE NEAR A HEAT SOURCE AS IT MAY CAUSE AN EXPLOSION.
10. FOR AA BATTERY HEATED PRODUCTS USE RECOMMENDED AA BATTERIES. FAILURE TO USE RECOMMENDED AA BATTERIES MAY CAUSE DAMAGE OR ELECTRICAL SHOCK. **(SEE AA BATTERY USAGE)**
11. RECYCLE BATTERIES AND POWER PACKS IN ACCORDANCE WITH LOCAL REGULATIONS.
12. MAKE SURE TO TURN THE HEATED GARMENT OFF AND DISCONNECT FROM POWER PACK WHEN NOT BEING USED.

## **3.7 VOLT BATTERY USAGE & STORAGE:**

### **3.7 VOLT RECHARGEABLE BATTERY USAGE-**

1. BE CERTAIN TO USE YOUR ACTIONHEAT™ PRODUCT WITH THE PROVIDED ACTIONHEAT™ POWER PACK. FAILURE TO DO SO CAN CAUSE THE PRODUCT OR POWER PACK TO OVERHEAT CAUSING DAMAGE.

2. RECOMMENDED POWER SETTING OF 50% IS SUFFICIENT FOR TEMPERATURES AROUND 50°-64°F WHILE AT LOWER TEMPERATURE SETTING THE POWER TO 75% OR 100% IS SUFFICIENT. IT IS NOT RECOMMENDED TO USE THE 100% POWER SETTING FOR A LONG TIME AS IT MAY CAUSE OVERHEATING AND/OR BODILY DISCOMFORT.

### **3.7 VOLT RECHARGEABLE BATTERY STORAGE-**

1. IT IS IMPORTANT TO MAINTAIN AT LEAST 25% OF YOUR BATTERY POWER WHEN NOT IN USE. FAILURE TO DO THIS WILL RESULT IN PERFORMANCE PROBLEMS AND REDUCED BATTERY LIFE.

2. DISCONNECT THE BATTERY PACK FROM THE GARMENT WHEN NOT IN USE BECAUSE EVEN WHEN IT IS TURNED OFF, THE GARMENT WILL CONTINUE TO SLOWLY DRAIN POWER FROM THE BATTERY PACK.

### **3.7 VOLT RECHARGEABLE BATTERY CARE-**

OUR LITHIUM-POLYMER BATTERY IS VERY SIMILAR TO A TYPICAL CELL PHONE BATTERY, SO BE SURE TO TREAT THE BATTERY WITH CARE. PROPER CARE AND STORAGE OF THE BATTERY WILL ENSURE THAT IT HAS A FULL LIFESPAN OF 500+ CYCLES.

## **AA BATTERY USAGE & STORAGE:**

### **AA BATTERY USAGE-**

1. BE CERTAIN TO USE YOUR ACTIONHEAT™ HEATED PRODUCT WITH THE PROVIDED ACTIONHEAT™ POWER PACK. FAILURE TO DO SO CAN CAUSE THE HEATED PRODUCT OR POWER PACK TO OVERHEAT CAUSING DAMAGE.

2. FOR BEST PERFORMANCE USE FRESH ALKALINE BATTERIES. USE RECOMMENDED BATTERY BRANDS SUCH AS ENERGIZER® OR DURACELL®. FAILURE TO DO SO CAN CAUSE DAMAGE OR ELECTRICAL SHOCK.

### **AA BATTERY STORAGE-**

WHEN AN ACTIONHEAT™ PRODUCT IS NOT IN USE, TURN POWER PACK OFF AND DISCONNECT FROM THE PRODUCT. IF POWER PACK IS NOT DISCONNECTED, EVEN WHEN THE PRODUCT AND POWER PACK IS TURNED OFF, THE PRODUCT WILL CONTINUE TO SLOWLY DRAIN POWER FROM THE POWER PACKS.

## **3.7 VOLT BATTERY SOCK CARE:**

1. DISCONNECT AND REMOVE POWER PACKS FROM HEATED PRODUCT.
2. BEFORE WASHING, SECURE ANY AND ALL WIRES INTO SOCK'S BATTERY POCKET.
3. TO PRESERVE QUALITY OF HEATING SYSTEM DO NOT WASH HEATED PRODUCT INSIDE OUT.
4. PLACE SOCKS INTO THE PROVIDED WASH BAG AND ZIPPER TO CLOSE BAG.
5. MACHINE WASH ON GENTLE CYCLE, WITH COLD WATER.
6. USE MILD LIQUID DETERGENTS ONLY. DO NOT USE POWDERED DETERGENTS OR FABRIC SOFTENER.
7. REMOVE SOCKS FROM WASH BAG, LAY FLAT OR HANG TO DRY. AIR DRY ONLY. DO NOT PUT IN DRYER, IRON OR DRY CLEAN.

## **AA BATTERY PRODUCTS CARE:**

1. BEFORE CLEANING, DISCONNECT AND REMOVE POWER PACKS.
2. SECURE ANY AND ALL WIRES INTO POCKETS.
3. SPOT CLEAN ONLY. DO NOT PUT IN WASHING MACHINE. DO NOT SCRUB WHILE CLEANING.
4. LAY FLAT OR HANG TO DRY. DO NOT PUT IN DRYER, IRON OR DRY CLEAN.

## **ACTIONHEAT™ PRODUCT WARRANTY:**

### **ELECTRICAL COMPONENTS OF THE GARMENT-**

WHEN YOU PURCHASE AN ACTIONHEAT™ HEATED GARMENT FROM AN AUTHORIZED ACTIONHEAT™ RETAILER WITHIN THE UNITED STATES THE ELECTRICAL COMPONENTS OF THE GARMENT ARE WARRANTED TO BE FREE FROM FACTORY DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF (90) NINETY DAYS.

### **GARMENT MATERIALS & CONSTRUCTION-**

ALL NON-ELECTRICAL COMPONENTS OF THE GARMENT ARE WARRANTED TO BE FREE FROM FACTORY DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF (90) NINETY DAYS FROM THE DATE OF THE INITIAL PURCHASE. IF THERE IS ANYTHING WRONG WITH THE SEWING OR MATERIALS OF AN ACTIONHEAT™ PRODUCT THAT WAS CAUSED BY MANUFACTURER'S DEFECT THE PRODUCT WILL BE REPAIRED OR REPLACED AT THE DISCRETION ACTIONHEAT™ AT NO CHARGE.

\*SHIPPING AND HANDLING FEES ARE THE RESPONSIBILITY OF THE PURCHASER.

### **BATTERY & CHARGER-**

ACTIONHEAT™ POWER BANKS & BATTERY POWER PACKS ARE UNDER WARRANTY FROM FACTORY DEFECTS FOR (90) NINETY DAYS FROM THE INITIAL PURCHASE DATE. ACTIONHEAT™ WILL REPAIR OR REPLACE ANY POWER PACK FOUND TO BE DEFECTIVE UNDER NORMAL USE WITHIN THE (90) NINETY DAY WARRANTY PERIOD.

### **WARRANTY EXCLUSIONS-**

- ANY DAMAGE CAUSED TO ANY ACTIONHEAT™ ITEM BY MISUSE, ABUSE, IMPROPER CARE, ACCIDENT, NORMAL WEAR AND TEAR, OR THE NATURAL BREAKDOWN OF MATERIALS OVER AN EXTENDED PERIOD OF TIME AND USE ARE NOT COVERED IN THIS WARRANTY.
- ANY ALTERATIONS OR REPAIRS (ATTEMPTED OR OTHERWISE) PERFORMED ON ANY ACTIONHEAT™ ITEM VOIDS ANY AND ALL WARRANTIES OFFERED BY ACTIONHEAT™ FOR THAT PARTICULAR ITEM.

\*WARRANTY APPLIES ONLY TO ONLY TO ORIGINAL PURCHASER AND ONLY FOR PRODUCTS PURCHASED DIRECTLY FROM AN AUTHORIZED ACTIONHEAT™ DEALER.



### **INSTRUCTION MANUAL:**

AA BATTERY & 3.7 VOLT LITHIUM-POLYMER  
HEATED APPAREL & ACCESSORIES

### **WARNING & SAFETY PRECAUTIONS!**

BEFORE USING ANY ACTIONHEAT™  
PRODUCT PLEASE READ & ADHERE TO ALL  
ENCLOSED INSTRUCTIONS, WARNINGS &  
CARE INFORMATION TO REDUCE RISK OF  
INJURY OR MISUSE. DUE TO THE NATURE  
OF BATTERY HEATED PRODUCTS,  
THEY MAY CAUSE SERIOUS  
BURNS OR DISCOMFORT.  
USE CAREFULLY!

[WWW.ACTIONHEAT.COM](http://WWW.ACTIONHEAT.COM)